


STEELMATE



BRIEF LOOK

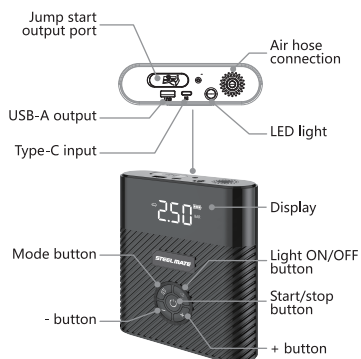

SPECIFICATIONS

Built-in battery capacity:	8800 mAh
USB Type-C Input:	5 V / 2 A
USB Type-C output:	5 V / 2.1 A
Start current:	300A @ 3 sec. 600A @ peak current
Storage temperature:	-20°C ~ +45°C -4°F ~ +113°F
Maximum inflatable pressure:	8.3 Bar / 120 Psi
Inflation rate:	0~2.5Bar/36Psi ≤6minutes @ 195/60/R15 tire
Pressure precision:	±0.1 Bar / ±2 Psi (Inflation) ±0.01 Bar / ±1 Psi (Display)
Air hose length:	50 cm
Weight:	0.66 kg

 


SP1 TIRE INFLATOR

A must have in car

ATTENTION! Read all instructions carefully

Failure to follow warning instructions can result in fire, personal injury or property damage.

INCLUDES

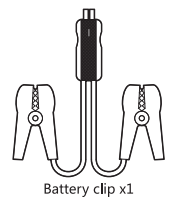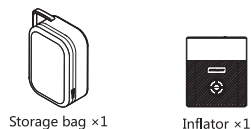

HOW TO OPERATE

1. Inflater on/off

Press button for 3 seconds to turn on/off the inflater.

If there is no operation within 5 seconds, the inflater will enter standby mode automatically.

2. Inflation modes

Press button to switch four inflation modes below.

- Car** Default: 2.5Bar
Adjustable range: 0.3~6.0Bar
- Motorcycle** Default: 2.4Bar
Adjustable range: 1.8~3.0Bar
- Bicycle** Default: 2.1Bar
Adjustable range: 0.3~9.99Bar
- Ball** Default: 0.6Bar
Adjustable range: 0.27~1.09Bar

3. Preset pressure adjustment

After selecting a inflation mode, press + or - button to adjust the preset pressure value. Press and hold the + or - button to quickly adjust the pressure value.

Once the pressure value has been adjusted, wait for the value to flash three times automatically or press button manually to confirm that the setting is complete.

4. Pressure unit

After selecting a inflation mode, press button to select the preferred pressure unit(Psi, Bar, kPa, kg/cm²).

Once the pressure unit has been selected, wait for the unit to flash three times automatically or press button manually to confirm that the setting is complete.

Tip:
1 Bar = 14.5 PSI = 100 kPa = 1.02 kg/cm²

5. Lighting modes

Press button for 3 seconds to turn on the light. Then press button to enter SOS mode, press button again to exit SOS mode.

Press button again for 3 seconds to turn off the light.

6. USB devices charging

Please use a original USB cable that come with your device and plug into the USB-A output port to start charging.


Think safety think Steelmate

7. Inflation



Switch on the inflater, and screw the air hose to it.

Screw the air hose to the tire's valve stem

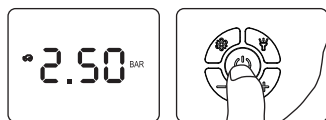

Set the desired mode, value and unit

Press button to start inflating


Tip : The inflater will stop inflating automatically when the preset pressure value reached. Or press button manually to stop inflating at any time.

8. Car charging



Plug the battery clip into the jump start output port

Connect the red clamp to + of car battery, black clamp to - of car battery

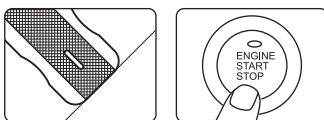

Then the indicator of the battery clip turns green

Start the car



Remove the clamps from the car battery in 30 seconds after started successfully

Disconnect the battery clamp from the inflater

Tip: Check the battery icon on the screen is 21% or higher.

TEMPERATURE PROTECTION

After a long time for inflating, the motor will temporarily stop running when its temperature reaches a certain threshold. At the same time, the system enters the temperature protection status, the screen displays "HI" for 5 seconds, after which returns to normal, and reminds once every minute until the temperature protection is released;

During the temperature protection period, in addition to inflation, other functions(preset pressure adjustment / pressure unit/ lighting mode etc) can be operated normally;

When the temperature protection is released, the system will automatically resume normal status.

Note: If press button during the temperature protection period, the screen will display "HI" again for 5 seconds;

PRECAUTIONS

- The inflater should only be operated by persons 16 years of age or older. Keep children at a safe distance when using the inflater.
- Do not put the product into the fire or heat it up.
- Do not hit the product with hard objects.
- Do not disassemble the product or alter the structure of the product.
- Do not put the product into water or other solvents.
- Please store the inflater at temperatures: -20°C ~ +45°C. Exposure to extreme heat or cold will shorten the inflater's service life and damage the built-in battery.
- Leaving the inflater unused for long periods may harm the battery. It is recommended to charge the inflater at least once every three months.



STEELMATE CO., LTD.

Steelmate Industrial Park, Heping Street, Donglu Road, Dongfang Town, Zhongshan City, Guangdong, P.R. China 528425.

PP10528R/C