

DS 512 Příkazy: EN/ CZ

|               |           |
|---------------|-----------|
| position      | pozice    |
| POSITION      | POZICE    |
| Position      | Pozice    |
| valetoff      | valetvyp  |
| VALETOFF      | VALETVYP  |
| Valetoff      | Valetvyp  |
| valeton       | valetzap  |
| VALETON       | VALETZAP  |
| Valeton       | Valetzap  |
| status        | stav      |
| STATUS        | STAV      |
| Status        | Stav      |
| arm           | zajisteno |
| ARM           | ZAJISTENO |
| Arm           | Zajisteno |
| disarm        | odjisteno |
| DISARM        | ODJISTENO |
| Disarm        | Odjisteno |
| auxon         | auxzap    |
| AUXON         | AUXZAP    |
| Auxon         | Auxzap    |
| auxoff        | auxvyp    |
| AUXOFF        | AUXVYP    |
| Auxoff        | Auxvyp    |
| setgsm        | setgsm    |
| SETGSM        | SETGSM    |
| Setgsm Setgsm | Setgsm    |
| readgsm       | cistgsm   |
| READGSM       | CISTGSM   |
| Readgsm       | Cistgsm   |

|               |              |
|---------------|--------------|
| alarmlog      | alarmlog     |
| ALARMLOG      | ALARMLOG     |
| Alarmlog      | Alarmlog     |
| clearlog      | clearlog     |
| CLEARLOG      | CLEARLOG     |
| Clearlog      | Clearlog     |
| antihijackoff | protiunosvyp |
| ANTIHIJACKOFF | PROTIUNOSVYP |
| Antihijackoff | Protiunosvyp |
| antihijackon  | protiunoszap |
| ANTIHIJACKON  | PROTIUNOSZAP |
| Antihijackon  | Protiunoszap |